



Bulkley Valley Backpackers Society

Garmin 60 CSx GPS

Button Functions:

ON-OFF button is at the top of the GPS

IN button is to zoom in on the map

OUT button is to zoom map out

PAGE button is to scroll through main pages

QUIT button is to reverse page display and back out of the current page

MENU button is used to display options on some pages

ENTR button is to accept changes on current screen or to open a highlighted function

MARK is to create a waypoint at any time

Use the **TOGGLE** button with four arrows to move around the current screen

Pages:

SATELLITE page — shows the number of satellites in view and level of reception

MAIN MENU page— access to tracks and routes pages and much more

TRIP COMPUTER page—click MENU and ENTR to reset to zero

MAP page— see your position and see routes and tracks on a moving map

COMPASS page—shows directions even while not moving

ALTIMETER page—shows elevation